
Here is how to set up all four 350QX v2 flight modes: There are two methods to access Agility mode on the Blade 350QX v2

Method One requires extending the end points of the gear channel beyond 120%

This can be done on either end but will replace SMART or STABILITY with AGILITY depending on which end point is adjusted.

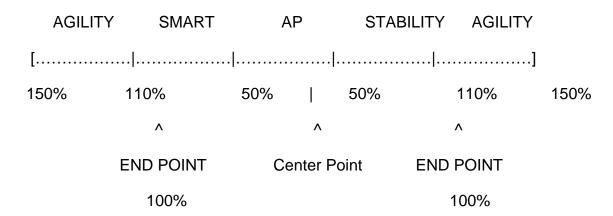

Method Two requires the addition of a program mix to select the 4th (AGILITY) flight mode.

DX7 through DX18 (including the new DX6)

MIXn

Gear > Gear

0%

50%

Switch: (MIX)

DX6i

MIX2

Gear > Gear

0%

75%

Switch: AIL D/R

Activating the mix will allow for AGILITY mode if your in STABILITY mode